ADJUSTMENT OF GAME PC BOARD (AIR INFERNO G25 00609A)

T-CONNECTOR

1	GND	5	GND	9	+5V
2	GND	6	NOT USE	10	+5V
3	GND	7	NOT USE	11	+5V
4	GND	8	POST	12	+5V

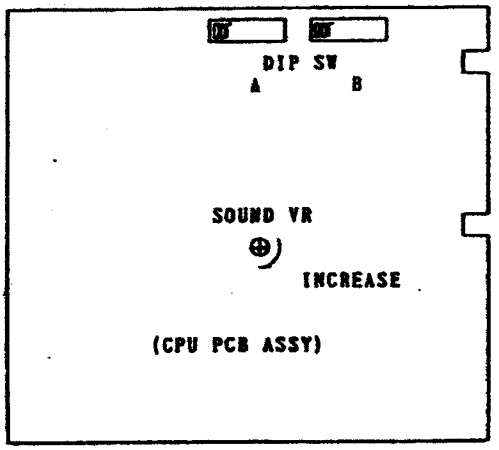

☆ CONTROL OF THIS GAME USES 2 LEVERS AND 2 BUTTONS.

J-CONNECTOR

SOLDER SIDE		COMPONENTS SIDE	
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
-5V	E	5	-5V
+13V	F	6	+12V
POST	H	7	POST
COIN METER B	J	8	COIN METER A
COIN LOCKOUT 2	K	9	COIN LOCKOUT 1
SP/CH1(-) F	L	10	SP/CH1(+) F
SP/CH2(-) F	M	11	SP/CH2(+) F
VIDEO G	N	12	VIDEO R
H-SYNC	P	13	VIDEO B
SERVICE SW	R	14	VIDEO GND
NOT USE	S	15	V-SYNC
COIN SW 2	T	16	COIN SW 1
NOT USE	U	17	1P SELECT
SP/CH3(-) F	V	18	SP/CH3(+) F
PULSE 1Y	W	19	PULSE 1X
PULSE 2Y	X	20	PULSE 2X
POS SW 1	Y	21	PULSE 3X
POS SW 2	Z	22	PULSE 3Y
POS SW 4	a	23	POS SW 3
POS SW 6	b	24	POS SW 5
LINE OUT	c	25	R SW A
GND	d	26	R SW B
NOT USE	e	27	R SW C
NOT USE	f	28	NOT USE

NOTE) BEFORE SETTING OF THE DIP SWITCH, TURN THE POWER SWITCH OFF.

◇ SETTING OF DIP SWITCH A

(*):FACTORY SETTINGS

SETTINGS	POSITIONS	1	2	3	4	5	6	7	8
MOVING CONTROL	UPRIGHT/COCKPIT	OFF							
	DX"MOVING" ONLY	ON							
CHANGEOVER OF TEST MODES ☞	* NORMAL TEST MODE		OFF						
	MOTION TEST MODE		ON						
TEST MODE	* NORMAL GAME			OFF					
	TEST MODE			ON					
ATTRACT SOUND	* WITH				OFF				
	WITHOUT				ON				
PLAY PRICING COIN A	* 1 COIN 1 PLAY					OFF	OFF		
	2 COINS 1 PLAY					ON			
	3 COINS 1 PLAY					OFF	ON		
	4 COINS 1 PLAY					ON			
PLAY PRICING COIN B	* 1 COIN 2 PLAYS							OFF	OFF
	1 COIN 3 PLAYS							ON	
	1 COIN 4 PLAYS							OFF	ON
	1 COIN 6 PLAYS							ON	

☞ THIS CHANGEOVER OF TEST MODES WILL BE OF EFFECT ONLY WHEN THE POSITION-3 OF THE DIP SW-A IS TURNED ON.

◇ SETTING OF DIP SWITCH B

SETTINGS	POSITIONS	1	2	3	4	5	6	7	8
GAME DIFFICULTY (WIND SPEED) EASY(A)— DIFFICULT(D)	* RANK B	OFF	OFF						
	RANK A	ON							
	RANK C	OFF	ON						
	RANK D	ON							
GAME DIFFICULTY (TIMER LENGTH)	* RANK B			OFF	OFF		OFF		
	RANK A			ON					
	RANK C			OFF	ON				
	RANK D			ON					
RUDDER PEDAL	WITHOUT(UPRIGHT)					OFF			
	WITH(COCKPIT/DX)					ON			